



Features size

AB(AOB) electricity pump shape and install the size

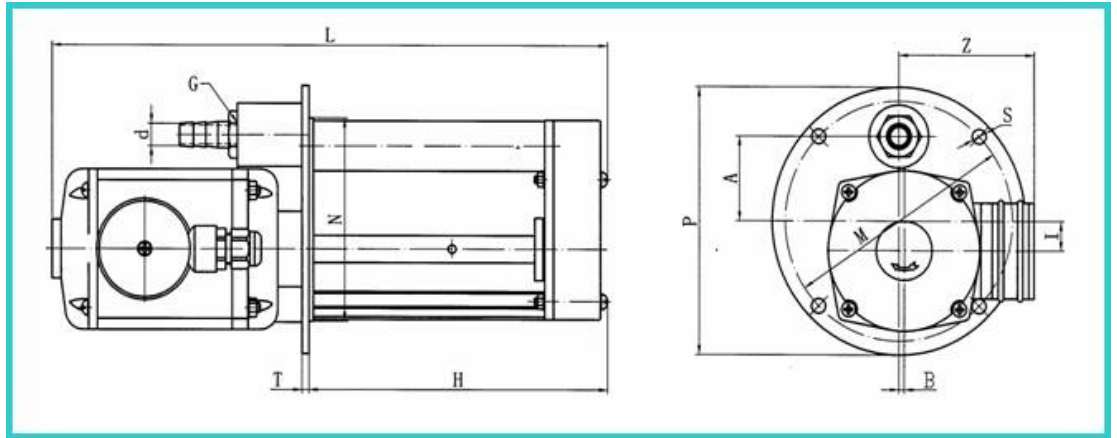


Model	H	L	N	P	T	A	Z	B	I	M	S	D	G
AB-6A	152	285	90	120	4	40	70	3	11	105	6	6	G3/8"
AB-12A	152	285	90	120	4	40	70	3	11	105	6	11	G3/8"
AB-25A	172	320	110	145	4	46	78	3	16	130	8	14	G1/2"
AB-50A	172	320	110	145	4	46	78	3	16	130	8	18	G1/2"
AB-100A	250	450	165	200	8	57	90	11	25	180	8	25	G1"
AB-200A	255	455	165	200	8	57	90	11	25	180	8	33	G3/2"

JCB electricity pump shape and install the size

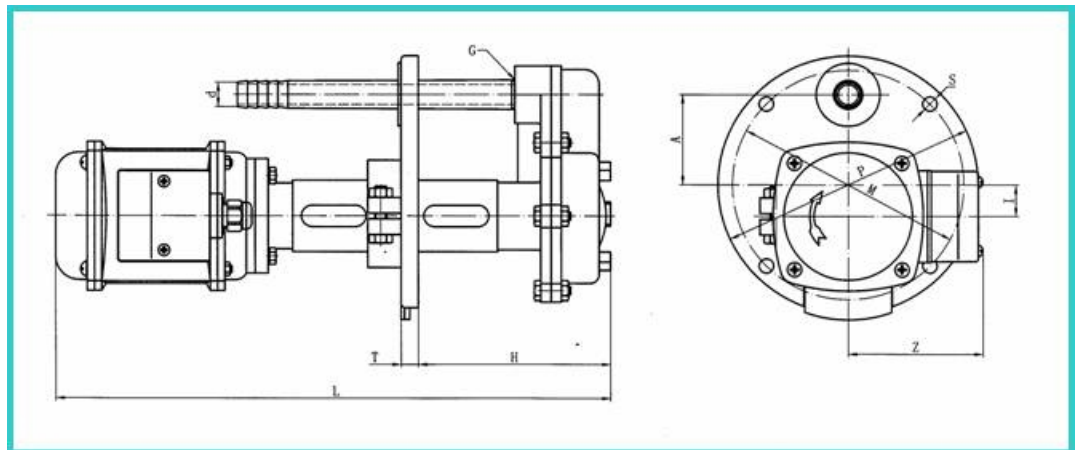

Model	H	L	P	T	A	Z	I	M	S	D	G
JCB-22	70-195	384	180	12	63	95	22	160	10	17	G1/2"
JCB-45	70-195	384	180	12	63	95	22	160	10	26	G3/4"
JCB-90	80-280	545	250	12	95	110	30	225	10	30	G1"

DB(DOB)electricity pump shape and install the size

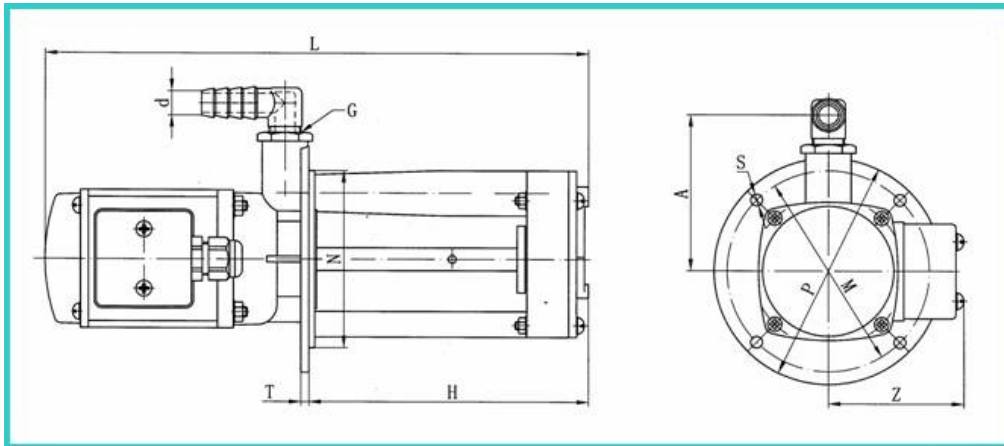

Model	H	L	N	P	T	A	Z	M	S	D	G
DB-6A	142	275	90	115	4	82	70	102	6	11	G3/8"
DB-6B	92	225	90	115	4	82	70	102	6	11	G3/8"
DB-12A	142	275	90	115	4	82	70	102	6	13	G3/8"
DB-12B	92	225	90	115	4	82	70	102	6	13	G3/8"
DB-25A	165	318	120	166	4	108	95	150	8	17	G1/2"
DB-25B	112	265	120	166	4	108	95	150	8	17	G1/2"
DB-50A	165	318	120	166	4	108	95	150	8	19	G1/2"
DB-50B	112	265	120	166	4	108	95	150	8	19	G1/2"
DB-100	220	455	140	175	5	142	100	160	8	25	G1"

Note:AOB and DOB all for single give or get an electric shock the pump mutually, its shape and install the size all in accordance with homologous AB or BDs gave or ge

AYB electricity pump shape and install the size



Model	Power (W)	Voltage (V)	Lift (M)	Capacity (L/M)
AYB-6	85	380	3	6
AYB-12	85	380	3	12
AYB-20	115	380	3	20
AYB-25	125	380	4	25
AYB-50	200	380	4	50
AYB-100	370	380	5	100